

User manual

windows System



No Sound?



Game system tutorial



Game Download

controller setting



Fix lagging issue

Factory Reset

Important !Do not update the game system!

It will deletes all games!!!

Gamepad shortcut

Hotkey+A:Open the Emulator menu

Hotkey+Start :Exit game

Hotkey+B:Restart game

Hotkey+L1:Capture the game footage

select:Arcade add coin

Hotkey+X:Save progress

Hotkey+Y:Load progress

Get help on whatsapp:+8615680559527

The default **hotkey** is **select** key. The select key of some games is occupied, causing the hotkey to fail.If you want to change the hotkey, go to the controller Settings to change it

Game download website:Romsfun.com