

Product Instruction Manual

I. Product Overview

This product is a household appliance, designed with safe circuitry and materials, suitable for indoor use in the home.

II. Instructions for Use

1. Before use, ensure the rated voltage matches your household power supply and place the appliance on a stable, well-ventilated surface.

2. Connect the power supply and operate the appliance according to the functions on the control panel.

3. After use, turn off the appliance first, then disconnect the power.

III. Cleaning and Maintenance

1. Always disconnect the power before cleaning. Allow the product to cool down before operation. Do not immerse the entire appliance in water.

2. Regularly clean the heat dissipation vents, filters, etc., to maintain proper operation.

3. When not in use for extended periods, clean the appliance, disconnect the power, and store it away from moisture and dust.

IV. Precautions

1. Do not plug or unplug the power cord with wet hands to prevent electric shock.

2. Do not disassemble or modify the appliance without authorization. If any abnormality occurs, immediately disconnect the power and stop use.

3. Children must use the appliance under adult supervision to prevent burns and electric shock.