

140x80mm 2025.3.22-改55W

 
正

使用说明书 User's Manual

使用说明

无线款

1. 连接充电器将电池充满电
2. 根据使用场合连接相应配件 (配件安装使用)
3. 打开吸尘器电源开关开始工作



充电时: 红灯状态
充满时: 绿灯状态
工作时: 绿灯状态

产品简介

- ① 海帕
- ② 集尘仓
- ③ 电源开关
- ④ 电源口
- ⑤ 散热口
- ⑥ 手柄

配件

- 充电线 (标配为1.5米充电线)
- 加长扁嘴
- 毛刷
- 吹气嘴

吹尘功能

适用于一些隐蔽缝隙地方, 如键盘、机箱、沙发地毯、书架、线路板、植物表面水珠等等


吸尘时 勿装尾巴漏斗会导致无吸力

吸尘功能

适用于食物残渣、宠物毛发、车内灰尘、异物沙粒、窗户缝隙、办公抽屉等等

拆洗清洗

1. 逆时针旋转尘仓, 将尘仓从机身上取下
2. 将尘仓内的海帕过滤网取出, 将垃圾倒入垃圾桶中
3. 如有必要, 可用潮湿的抹布或者一次性纸巾清洁尘杯, 过滤网可用水进行冲洗, 水洗后必须彻底晾干后再次使用
4. 要重新安装尘仓, 将海帕过滤网放入尘仓, 参照步骤1反方向旋转拧紧即可使用



售后服务

客户姓名	联系电话
地址	
产品名称	购买日期
保修说明:	

1. 本保修卡请用户妥善保管, 以作保修凭证, 遗失恕不补发。
2. 本产品购买之日起三个月内为保修期, 在保修期内, 因产品质量问题, 用户可凭此卡随购机发票或发票复印件, 向我司或当地经销商联系, 有我们负责“三包”
3. 非质量问题, 不在三包内。

产品参数

产品型号	噪音	电机功率	产品尺寸	产品重量	尘杯容量	电源方式
AS-228	低于40dB	55W	154*147*55MM	约215g	0.1L	USB充电

注意事项

1. 除非有授权修理人员进行, 否则请勿拆卸、维修或改装本产品。
2. 请勿在操作本产品时, 遮盖进风口或排风口, 否则产品可能因过热而变形或着火。
3. 使用本产品不得吸入可燃物, 如燃烧中的烟头。
4. 请妥善放置好本产品, 勿让小孩接触。
5. (无线款) 充电线请确保开关已关闭, 严禁边充电边使用。

提示

⚠️ 充电中请勿启动, 请充满电再使用!

140x80mm

 
反面

User's Manual

Directions for use

The wireless device

1. Connect the charger to fully charge the battery
2. Connect the corresponding accessories according to the use situation (accessories installation and use)
3. Turn on the power switch of the vacuum cleaner and start working



When charging: red light status
When full: green light status
When working: green light status

Product introduction

- ① The sea
- ② Dust bin
- ③ The power switch
- ④ Power supply mouth
- ⑤ The cooling mouth
- ⑥ The handle

accessories

- Charging line
- Extended flat nozzle
- hairbrush
- Blowpipe

Dust blowing function

It is applicable to some hidden crevices, such as keyboard, chassis, sofa carpet, bookshelf, circuit board, water drops or plant surface, etc


When vacuuming work, can not install blow funnel, can cause suction to reduce

Dust suction function

Applicable to food residue, pet hair, car seat, sand particles on the floor mat, window gap, office drawer, etc

Fold the wash clean

1. Rotate the dust bin counterclockwise to remove the dust bin from the fuselage
2. Take out the Hippa filter in the dust bin and pour the garbage into the trash can
3. If necessary, use a slightly damp rag or disposable paper towel to clean the dust cup. The filter screen can be washed with water and must be thoroughly dried before use again
4. To reinstall the dust bin, place the Hippa air filter into the dust bin and rotate it in the opposite direction to tighten it by referring to Step 1



After-sales service

customer name	The phone
address	
The product name	Purchase date
Warranty that	

1. This warranty card shall be properly kept by the user for warranty proof. If lost, it will not be reissued.
2. Within three months from the date of this product to buy for the warranty period, during the warranty period, because of quality problems Users can by this card along with the upgrade invoice or invoice copy to our company or contact the local distributors, we have negative new-type computer "3 packets"
3. Non-quality problem, not in the three package.

Product parameters

Product model	The noise	The motor power	Product size	The product weight	The capacity of dust	The power supply mode
AS-228	Less than 40 db	55W	154*147*55MM	About 215g	0.1L	USB charging

Matters needing attention

1. Do not remove, repair or modify the product unless authorized repair personnel carry it out.
2. Do not cover the air inlet or exhaust outlet when operating the product, otherwise the product may be deformed or caught on fire due to overheating.
3. Do not inhale combustibles such as burning cigarette butts when using this product.
4. Please place the product properly and keep it away from children.
5. (wireless) Please make sure that the switch of charging cable is turned off. It is forbidden to use it while charging.

prompt

⚠️ Please do not start when charging, please fully charge before using!