

Contents

Safety	1~2
Overview	3
Operation.....	4~5
Technical data.....	6

Safety

1. Before first plugging the unit into your outlet, check that voltage indicated on the rating label corresponds to the voltage of your home.
2. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
3. When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
4. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.




5. **WARNING**-Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
6. Do not use the hair dryer for any other purposes than those described in this instruction manual.
7. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervised

8. Do not use outdoors.
9. Always unplug the hair dryer from the power supply when not in use and before cleaning.
10. To protect against the risk of electric shock, do not immerse the appliance in water or in any other liquids.
11. Do not spray aerosol products when the hair dryer is operation.

12. Do not leave the hair dryer switched on when you do not use it.
13. Do not use other attachments than which supplied.
14. The air inlet and outlet openings should never be obstructed to prevent from getting too hot.
15. If however, the airflow is inadvertently obstructed during use, the built-in thermal safety cut-off will automatically switch off the appliance. The hair dryer will switch on again automatically after cooling down for a few minutes.
16. Keep your hair away from the immediate vicinity of inlet opening to prevent from being drawn in.
17. Store the appliance in a cool, dry place. Do not use it when there is water in your hands.

Overview

Please read the following instructions carefully to allow you to enjoy your quality product:

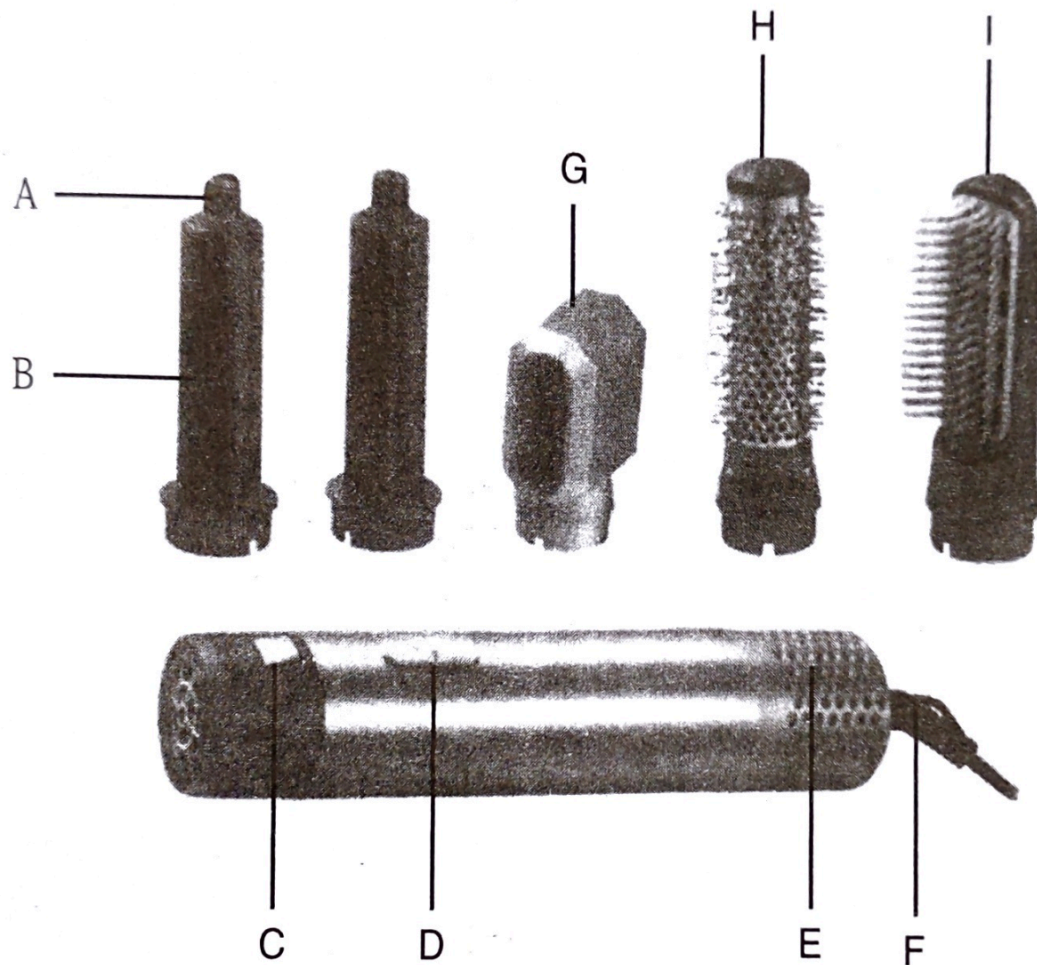

A : Cool Tip

B: Detachable Spiral Curler Attachment (30mm)

C : Unlocking Button

D : Power Switch / Temperature Regulation (55°C-80°C-105°C)

E : Hinged Rear Filter

F : Hanging loop

G:Blower attachment

H: Curier Brush

I: Multi-function Brush

Operation

Settings :

Your appliance has the following setting options:

Temperature level

0: Off

1: Moderate temperature for gentle drying and styling

2: High temperature for fast drying and styling

3: Highest temperature for fast drying and styling

Changing the styling attachment :

Fit the attachment onto the body of the unit by lining up the guides on the two parts and then press the two together while revolve the comb gently to clockwise direction until you hear a click. To remove the comb, press on the unlocking button located on the sides of the unit and gently pull the attachment off .

The styling attachment is a spiral comb is for hair curling purpose .

How to use the attachments

The styling attachment is a spiral comb is for hair curling purpose .

*Ensure that the sign “ ● ” of the attachment and the sign “ ▲ ” of the unit are in line
Rotating the attachment clockwise until a "click" sound is heard.

*To remove, press the sign “ PUSH ▲ ” of the unit and turn the attachment counterclockwise and pull out it.

* Blow Brush

For creating beautiful side waves.

1. Tension Comb for more effective hair catching capabilities.

2. To use the Tension Comb, place the hair firmly into the brush.

*Roller Brush

Spread your hair on locks and wind then up on round brush. To untwist the lock, press the button above the operation switch. Do not comb hair right after a curling.

give them preliminary to cool down.

Operation

Check if the mains voltage on the type plate (on the handle of the appliance) corresponds to your local mains supply.

- 1 Towel dry your hair thoroughly after washing.**
- 2 Plug the power cord into the wall socket.**
- 3 Turn on the appliance with the switch D and set the temperature level.**
- 4 If required you can interrupt the hot air supply when drying by turning the switch D to "1" position (cold air setting).**

Note

The cold air setting interrupts the hot air operation and provides a cool air flow. This allows you to fix your hairstyle better and more lastingly.

5 After use, switch off the appliance with the D button and pull out power cord from the wall socket.

Caution

Never wind the power cord around the appliance, as this can result in damage. Check the power cord and the appliance regularly for visible damage.

Cleaning

1. The appliance can be cleaned with a dry cloth.
2. The attachments can be cleaned with a moist cloth or rinsed under a running tap. Remove the attachments from the appliance before cleaning them. Make sure the attachments are dry before using or storing them.

Never rinse the appliance with water

Storage

When not in use "unplug it."

Allow the appliance to cool and store it in a dry location/ Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. If the supply cord of this appliance becomes damaged the appliance must be replaced by

returning to the retailer from which the product was purchased or a similarly qualified person in order to avoid a hazard.

Warranty Information

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of;

- Normal wear and tear.
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliance

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling

Technical data

Power supply: AC110V ~60HZ AC220-240V ~ 50/ 60 HZ

Power: 1000 W.