

User Manual

DiamondMicrodermabrasion Device



LW-089



LW-089A

- Thank you very much for your purchase.
- Please read the manual carefully before use to ensure proper operation. After reading, store it properly for future reference.
- This beauty device is intended for skincare and cosmetic purposes only, based on the premise of maintaining healthy skin. It is prohibited to use or sell this device for medical treatment purposes.

Control Panel Features



Important Notes

1. Please read the manual thoroughly before using the device.
2. Consult a doctor before use if you have any of the following conditions:
 - (1) Heart disease, heart murmurs, arrhythmia, or if you have a pacemaker or other heart rate stabilizer.
 - (2) Pregnancy or menstruation.
 - (3) Epilepsy, alcoholism, ulcers, stomach issues, skin swelling, breast cancer, intestinal, liver, or pancreatic diseases.
 - (4) Major surgery within the past year.
 - (5) Sensitive skin, rashes, skin damage, inflammation, infection, surgical scars less than 12 months old, skin swelling. Do not direct the probe toward the eyes, genitals, or mouth.
3. It is recommended to use the inclined area of the handle to contact the skin surface and continue to slide slowly.
4. Do not stay in one place for too long, as it may damage the skin.
5. It is recommended to adjust the intensity slowly from minimum to maximum. Avoid setting the intensity to maximum unless necessary.
6. Edema and erythema may occur after use but will disappear within a few hours.

Note: Always store the device out of reach of children.

Operating Instructions

1. For oily or acne-prone skin, use a steamer before use or apply a degreasing lotion before cleansing.
2. Clean the skin with cleansing gel or water, then wipe with a cotton pad. Let the skin dry.
3. Attach the diamond head or spray gun to the device.
4. Turn on the power switch.
5. Adjust the intensity by pressing the "LEVEL" button as needed, then begin operation.
6. After use, remove dead skin residue with a soft brush, then rinse with a wet sponge or cold towel.
7. Let the skin dry, then apply the desired skincare products.
8. To clean the diamond head, use a toothbrush or a cotton swab dipped in a small amount of alcohol to wipe off dirt, then sterilize with UV light or high temperature.

Product Principle

1. The device uses a microdermabrasion tube embedded with diamond particles, applying friction and vacuum suction principles to remove the outer layer of aging keratin and promote skin renewal.
2. It can remove debris, blemishes, wrinkles, and excess pigmentation from the skin.
3. Moderate use of the diamond microdermabrasion device, combined with skincare products that penetrate the dermis, helps replenish nutrients, restore cell activity, and promote skin health.

Installing the Diamond Head



- (1) Attach the rubber
- (2) Place the filter
- (3) Finally, install the ring to prevent air cotton inside, replace diamond head and leakage. if necessary. tighten it.

Spray Gun Introduction



Technical Specifications

Charging voltage: DC 5V
Charging current: 1A
Lithium battery parameters: 3.7V/1500mAh
Filter cotton: 1 pack
Rubber rings: 2
LW-089A: 3 diamond heads
LW-089: 9 diamond heads
LW-089: 1 spray gun
LW-089: 1 stand
LW-089: 1 PVC vacuum hose
USB charging cable: 1
Auto shut-off after 10 minutes
Material: ABS, PC, metal parts
Full charge time: 3 hours, continuous use for about 1 hour
Power indicator: Red when battery is below 25%, blue when above 25%. Red and blue alternate while charging.

Other Accessories



After-sales service

The product is guaranteed for one year from the date of purchase (excluding consumables) in the event of a malfunction during use from the date of sale.

1. Under the premise of following the relevant instructions of this product, in the event of malfunction, free maintenance can be carried out.

2. During the warranty period, if the following conditions Oh my, it's a paid maintenance.

(1) Incorrect use, incorrect repair, modification or damage due to malfunction.

(2) After purchasing this product, it is damaged due to man-made external forces.

(3) Failure and damage due to abnormal voltage caused by natural disasters.

(4) Abnormal connection with other electrical appliances causes product failure.

Warranty Card

1. This product enjoys a free warranty within one year from the date of purchase. It has been used in normal operation and has not been disassembled and repaired. The warranty personnel have confirmed that it is a product quality problem and enjoy the warranty service. Repairs are provided under any normal use.
2. The warranty card should be filled out at the time of Purchase. The warranty card is irrelevant. The company's warranty is invalid. Please bring the warranty card when repairing the product.

Customer name	
The way of buying	
Product number	
Purchase date	Year month day- year month day
Customer name	Year month day- year month day