

LED Wall Digital Clock

SET button:

- Press briefly to set the following in sequence: Year – Month – Day – 12H/24H – Hours – Minutes
- Press and hold to activate the temperature calibration function; press UP/DOWN to adjust

UP button:

- Press and hold for 3 seconds to turn automatic brightness on or off; ON means on, OFF means off
- Increase the value during settings

DOWN button:

- Press briefly to adjust between 3 brightness levels
- Press and hold for 3 seconds to open the alarm settings screen; press UP/DOWN to turn the alarm on or off (ON = on, OFF = off)
- Press the SET button to set the alarm time
- Used to decrease the value during settings

EXIT button:

- Press briefly to start the hourly chime function

- In settings mode, press to save settings and return to the main screen

The device supports up to 6 alarm groups. To set them up, follow these steps:

1. On the main screen, press and hold the DOWN button for 3 seconds to enter the alarm settings screen, where 'ALL1--' will be displayed.
2. Use the UP or DOWN buttons to enable or disable the first alarm (the alarm icon will light up when enabled).
3. Press the SET button briefly to enter the time settings for that alarm; use the UP/DOWN buttons to adjust the time.
4. Press the SET button briefly again to confirm and proceed to the next alarm setting.
5. Repeat the above steps to set the other alarms; once you have finished, press EXIT to exit.

Hourly Chime Function

- Press the EXIT button briefly on the main screen to quickly enable or disable the hourly chime function (the icon lights up when enabled).
- The chime function is active between 07:00 and 21:00 daily; it is automatically muted between 22:00 and 06:00.

Brightness Adjustment and Night Mode

- The device supports three levels of manual brightness adjustment:
when Night Mode is off, briefly press the DOWN button to cycle through the brightness levels.
- Automatic Night Brightness Mode:

This is disabled by default; press and hold the UP button for 3 seconds to toggle the function.

Once enabled, the device will automatically adjust the brightness according to the time:

High-brightness period: 07:00–20:59

Low-brightness period: 21:00–06:59

Please Note: When night mode is enabled, the manual brightness adjustment function will be temporarily disabled.