

Multifunction air hair styler
The use of accessories,
precision modeling



30mm curler

Both front and back curls are suitable allowing you to curl your hair in both clockwise and counterclockwise directions without changing the roll, resulting in a fuller curl and wave shape more quickly. The long curler allows you to wind 50% more hair each time and complete the long hair styling faster.



40mm curler

Hair can be curled in both clockwise and counterclockwise directions without the need to change the roll. The styling roll utilizes air to achieve curling and waves in different directions.



Anti flying and drying hair nozzle

A nozzle with multiple functions including drying, smoothing, and hidden flying in two modes. The smooth mode utilizes the Konda effect to reduce up to 62% of warping in one go. In dry hair mode, a concentrated DC airflow can be blown out to quickly dry hair and prepare for styling.



Soft and smooth comb

Enhanced control of the Kangda effect airflow, making it easier to absorb dry hair and shape it faster, making it easy to create smooth and straight hair.




Cylindrical comb

You can wrap your hair around a cylindrical comb to create a fluffy effect.



function

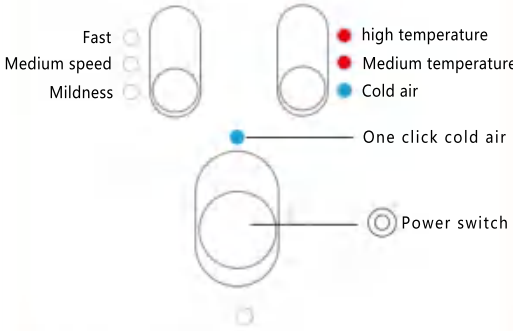


Cleanses



Tip: Please clean once a week to once a month!

Anti-flying and dry hair air nozzle

Use as shown below
Don't point the arrow in the wrong place.
This can lead to blockage of the vent.
Can not be used normally,
Please put the arrow in the correct position

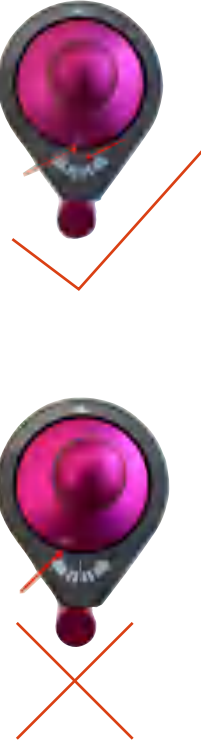

Gently rotate the reel to easily control the airflow

Redesigned the styling accessories with innovative geometric structures. With just a simple rotation, the pattern, direction, and intensity of the airflow in the accessory can be changed to create an ideal shape.



Important safety instructions

Before using this product, please read all instructions and warnings in this manual and on the product

When using electrical appliances, you should always observe the basic precautions, including the following:

Warning

1. Stay away from Pacemakers, defibrillators, credit cards, and electronic storage media. To reduce the risk of fire, electric shock and injury.

Warning

The following warning notes apply to this product and to all tools, accessories, chargers, or power adapters required.

2. This product can not be used by persons with physical, sensory or intellectual disabilities and persons without relevant experience and knowledge (including children). Unless supervised or directed by a guardian to ensure safe use of the product.
3. Please do not use this product as a toy. This is especially important when used by or near children. Take Care of children and make sure they do not use this product as a toy.
4. If this product is used in the bathroom, please unplug it after use. Even if this product is closed, access to water can be dangerous.



5. Warning: Do not use in bath, bath, wash basin or other water container accessories, this product.
6. In case the power cord is damaged, it must be replaced or repaired by the manufacturer, its service agent or qualified personnel.
7. This product is equipped with non-self-reset thermal safety cut-off device, used to prevent overheating. If the product is cut off, please pull the plug from the main power socket to cool it.
8. Note: In order to avoid the risk of accidental reset due to hot cut-off, this product shall not be powered by external switch devices such as timers, meters, etc. It shall not be connected to a circuit that is opened and closed at regular intervals by a utility company, do not plug into any outlet where the power is unstable or may be turned off.
9. To provide additional protection, it is recommended that the residual-current device be installed with a rated leakage current not exceeding 3 ma. Please seek the advice of the installer.
10. Please do not use this product for any purpose other than dry hair.
11. Do not touch the plug or any part of the product with wet hands.
12. Do not pull the cable when drawing the power supply. To pull the plug, hold the plug instead of the cable. It is not recommended to use extension cables.
13. Do not pull or heavy-duty power cord. Keep the power cord away from the heated surface. Do not wind the power cord around the product.
14. Do not use any lubricants, detergents, polishes or Air freshener on any parts of this product.
15. Please contact customer service if maintenance or repair is required. Please do not disassemble the product. Improper disassembly operation may cause electric shock or fire.
16. If the product does not operate as designed, is severely impacted, falls or is damaged from a height, is placed outdoors or in water, do not use and contact customer service.



Exhaust port and Metal Ring may be hot in use, cool before touching

Hello

Thank you for your purchase Multifunctional air hair styler

Before using this product, please read all instructions and warnings in the user manual and on the product:

