

## 1.Introduction

Thank you for choosing our product.Please read this manual carefully before first use for safe operation, and keep it for future reference.Our product is designed for reliability and convenience.

## 2.Safety Precautions

- Do not use the product beyond its intended purpose to avoid damage or injury.
- Keep away from children under 3 years old without supervision; small parts may cause choking (if applicable).
- Stop using immediately if the product is damaged, malfunctioning or makes abnormal noises; contact customer service.
- Do not disassemble, modify or repair the product yourself (may void warranty and cause risks).
- For electrical products: Match voltage before use; keep away from water/heat; unplug when not in use; replace damaged cords/plugs with originals only.
- Avoid extreme temperatures, direct sunlight and heavy loads on the product.

## 3.How to Use

- Unpack and check all parts; contact customer service if missing/damaged.
- Clean the product surface with a soft, dry cloth (no corrosive cleaners).
- Power on: Press "ON/OFF" button; adjust settings (if applicable) as needed.
- Use as intended; avoid overuse or improper operation.
- Power off: Press "ON/OFF" again; unplug electrical products after use.

## 4.Maintenance

- Turn off/unplug before cleaning; wipe dry if using mild cleaners.
- Do not immerse in water unless marked waterproof.
- Check accessories regularly; replace damaged parts with originals only.
- Charge batteries regularly (if applicable); do not overcharge/over-discharge.