

Latex Balloon Inflation Guide

1



Step 1: Lay the deflated balloon flat

2

Step 2: Inflate the balloon to the desired size (until it reaches the inflator's nozzle size) - Deflated Inflated



3



4



Step 4: Tie a knot at the balloon's neck to secure

Notes:



Note: Avoid over-inflation to prevent bursting



Note: Keep away from sharp objects