

# General Manual for Bluetooth Speaker

## I. Product Introduction

This Bluetooth speaker adopts a high-definition sound unit, supporting multiple playback modes including Bluetooth, TF card and AUX. It is portable, easy to operate and has a long battery life, compatible with various Bluetooth devices. Suitable for multiple scenarios, it meets the needs of music playback, calls and more.

## II. Safety Precautions

### 1.1 General Safety

- 

Avoid high temperature, humidity, direct sunlight and rain to prevent component damage.

- 
- 

Do not disassemble or repair the speaker by yourself; contact official after-sales service for faults.

- 
- 

Slight heating during operation is normal; avoid touching the heating part for a long time.

- 
- 

Use the supporting or compliant charger; do not use inferior chargers.

- 
- 

Children must use it under adult supervision to prevent safety risks.

- 

## 1.2 Charging Safety

- 

Keep ventilated when charging; do not cover the speaker.

- 

- 

Unplug the charger in time after full charge to extend battery life.

- 

- 

Immediately cut off the power and contact after-sales service if there is abnormal charging (such as overheating, peculiar smell, etc.).

- 

## 1.3 Usage Safety

- 

Avoid playing at maximum volume for a long time to prevent hearing damage and speaker damage.

- 

- 

Avoid dropping and collision when using outdoors to prevent equipment damage.

- 

- 

Avoid liquid spilling into the speaker; cut off the power immediately and dry it if it gets wet.

-

# III. Product Component Introduction

(Note: The position of components may vary slightly by model; please refer to the actual product.)

- 

Power Button: Press and hold for 3 seconds to turn on/off; short press to pause/play.

- 

- 

Bluetooth Button: Short press to enter pairing mode; press and hold to disconnect and re-pair.

- 

- 

Volume +/- Buttons: Short press to adjust volume; press and hold to switch tracks (for some models).

- 

- 

TF Card Slot: Insert a TF card in MP3 format to automatically switch to TF card playback mode.

- 

- 

AUX Interface: Connect to devices via AUX audio cable for wired playback.

- 

- 

Charging Interface: Connect to the charger; the indicator light shows the status during charging.

- 

- 

Indicator Light: Shows power-on, pairing, charging and other statuses (see below for details).

- 
- 

Microphone (for some models): Supports Bluetooth hands-free calls.

- 

## IV. Usage Instructions

### 4.1 Power On and Off

- 

Power On: Press and hold the power button for 3 seconds; the indicator light turns on with a prompt tone, entering Bluetooth standby mode.

- 
- 

Power Off: Press and hold the power button for 3 seconds; the indicator light goes out; it will automatically shut down if there is no operation for a long time.

- 

### 4.2 Bluetooth Connection Usage

#### 1.

Automatically enter pairing mode after power-on (indicator light flashes quickly with a prompt tone).

#### 2.

#### 3.

Turn on Bluetooth on your device and search for the corresponding speaker name (XXX Bluetooth Speaker).

#### 4.

#### 5.

Click to connect; the indicator light stays on with a prompt tone after successful connection.

- 6.
- 7.

You can play sound after connection; the volume can be adjusted via the speaker or the device.

- 8.
- 9.

Short press the Bluetooth button or move beyond 10 meters to disconnect and re-enter pairing mode.

- 10.
- 11.

It will automatically connect to the last paired device (with Bluetooth turned on) when powered on next time.

- 12.

## 4.3 TF Card Playback Usage

- 

Insert a TF card in MP3 format correctly into the slot; do not insert it forcibly.

- 
- 

It will automatically switch to TF card mode after insertion, with the indicator light staying on and music playing.

- 
- 

Short press the power button to pause/play; use the volume buttons to adjust volume and switch tracks.

- 
-

Take out the TF card to automatically switch back to Bluetooth standby mode.

- 

## 4.4 AUX Wired Playback Usage

- 1.

Connect the speaker to the device's headphone jack with an AUX audio cable.

- 2.
- 3.

Automatically switch to AUX mode after successful connection, with the indicator light staying on.

- 4.
- 5.

Play sound from the device; the volume can be adjusted via the speaker or the device.

- 6.
- 7.

Unplug the audio cable to automatically switch back to Bluetooth standby mode.

- 8.

## 4.5 Bluetooth Call Usage (for some models)

- 

After Bluetooth connection, the speaker will ring and the indicator light will flash when there is an incoming call.

- 
- 

Short press the power button/Bluetooth button to answer the call; talk via the microphone.

- 
- 

Short press the power button/Bluetooth button to hang up; the call will end automatically if the other party hangs up.

- 
- 

Press and hold the Bluetooth button for 2 seconds to reject an incoming call.

- 

## V. Indicator Light Status Description

| Indicator Light Status | Corresponding Status Description |
|------------------------|----------------------------------|
| Blue Fast Flashing     | Bluetooth Pairing                |
| Blue Steady On         | Bluetooth Connection Successful  |
| Green Steady On        | TF Card Playback Mode            |
| Yellow Steady On       | AUX Playback Mode                |
| Red Flashing           | Low Battery, Need Charging       |
| Red Steady On          | Charging in Progress             |
| Indicator Light Off    | Power Off or Battery Depleted    |

## VI. Charging Instructions

-

Charge in time when the battery is low (red light flashing, low sound or shutdown).

- 
- 

Connect the charger; the red light stays on indicating charging in progress.

- 
- 

After full charge, the indicator light turns green (or goes out for some models), then you can unplug the charger.

- 
- 

Charging time is 2-4 hours, depending on the charger and remaining battery power.

- 
- 

Fully charge and discharge at least once a month; store with full charge when not in use for a long time, and supplementary charge every 3 months.

- 

## VII. Common Faults and Solutions

| Common Faults               | Possible Causes                                                                   | Solutions                                                                                                  |
|-----------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| Cannot Power On             | Battery Depleted,<br>Power Button Not<br>Pressed Properly                         | Charge for 30 minutes before<br>powering on; press and hold<br>the power button for more<br>than 3 seconds |
| Bluetooth Not<br>Searchable | Not in Pairing Mode,<br>Too Far Distance,<br>Device Connected to<br>Other Devices | Enter pairing mode, move<br>closer to the speaker,<br>disconnect other connections                         |

|                                     |                                                               |                                                                                                                  |
|-------------------------------------|---------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
| No Sound After Bluetooth Connection | Volume is 0, Connection Abnormal                              | Adjust volume, re-pair and connect                                                                               |
| No Sound in TF Card Playback        | Incorrect Insertion, Unsupported Format, Damaged TF Card      | Reinsert the card, replace with MP3 format or a new TF card                                                      |
| No Response When Charging           | Damaged Charger, Poor Interface Contact, No Power in Socket   | Replace the charger, clean the interface, replace the socket                                                     |
| Sound Distortion/Noise              | Too High Volume, Long Distance, Interference, Damaged Speaker | Lower the volume, move closer to the device, stay away from interference; contact after-sales service if damaged |

## VIII. Product Parameters (General Version)

- 

Bluetooth Version: V5.0 and above (backward compatible)

- 
- 

Transmission Distance: 10 meters (no obstruction)

- 
- 

Speaker Power: 5W-20W (varies by model)

- 
- 

Battery Capacity: 1000mAh-5000mAh (varies by model)

- 
-

Playback Time: 5-20 hours (medium volume)

- 
- 

Charging Voltage: 5V/1A

- 
- 

Supported Format: MP3 (TF card)

- 
- 

Operating Temperature: 0°C-45°C

- 

Thank you for choosing this Bluetooth speaker. Wish you a pleasant use!