

Product Manual of Electronics Accessories

Quick Start Guide:

- Unpack the stylus from the package.
- Ensure the rubber tip is clean before use.
- Use the stylus on your capacitive touch screen devices.
- Store the stylus in a safe place when not in use.

Warnings:

- CHOKING HAZARD - Small parts. Not for children under 3 yrs.

Safety Information:

- Keep the stylus dry and away from moisture.
- Wipe the rubber tip with a damp cloth to maintain cleanliness.

Service: Contact our store support for any issues.