

Dimensions: 130\*190MM

Front

Shoe Dryer User Manual

1. Be sure to check the power cord plug before use to avoid accidents such as electric shock or fire.

2. Please use the correct 220V-50Hz and 110V-60Hz (US standard) AC power supply.

3. It is strictly prohibited to use it in the bathroom.

4. Do not let children play with machines.

Shoe DryerInstructions

1.Be sure to check the power cord plug before use to avoid accidents such as electric shock and fire.

2.Please equip with the correct AC power supply of 220V-50Hz and 110V-60Hz (American standard).

3.It is strictly prohibited to use it in the bathroom.

4.Do not let children play with the machine.

건조기 사용 설명서

1. 220V-0z110V-60z()AC power supply

3.

4.

الألة لوحة جهاز تجفيف الأحذية

0j5202

==-.4

Shoe Dryer User Manual

Before use, the power cord connector must be checked to prevent accidents such as electrical...  
Avoid shock and fire.

2.Please equip the correct AC power supply of 220V-50Hz and 110V-60Hz.  
(US standard).

3. It is strictly prohibited to bring it into the bathroom.

4.Do not let children play with the machine.

Instructions for using the shoe dryer

1.Before use, check the power cable connector to avoid accidents such as  
electric shocks and fires.

2.Please equip the correct AC power source of 220V-50Hz and  
110V-60Hz (American standard).

3. It is strictly prohibited to wear it in the bathroom for use.

4.Do not let children play with the machine.

Shoe Dryer Manual

1.Before use, check the power cord plug to avoid accidents such as electric shocks.  
electricity and fires.

2. Please provide the correct AC power source of 220V-50Hz and 110V-60Hz (American standard).

3. It is strictly prohibited to take it into the bathroom for use.

4. Do not let children play with the machine.

Shoe Dryer Instructions

1.Before use, check the power cord outlet to avoid accidents such as electric shock.  
and fires.

2.Please connect the correct AC power supply of 220V-50Hz and 110V-60Hz (standard).  
American.

3.It is strictly prohibited to take it into the bathroom for use.

4.Do not let children play with the machine.

Shoe Dryer User Manual

1. Before use, please be sure to inspect the power cord plug to prevent accidents such as electric shock or fire.

2. Please equip with the correct AC power supply of 220V-50Hz or 110V-60Hz (US standard).

3. It is strictly prohibited to bring it into the bathroom for use.

4. Do not let children play with the machine.

Back side

Instructions for the shoe dryer

1.Before use, please check the power cable plug to avoid accidents such as  
electric shock.

2.Please provide the correct AC power supply 220V-50Hz or 110V-60Hz (American standard).

3. It is strictly prohibited to bring it into the bathroom for use.

4.Do not allow children to play with the machine

Instructions for the shoe dryer

1.Before use, the cable label must be checked to prevent accidents such as injuries.  
electric current and a static charge.

2.Vybavte si správnou sílu do koupení k 220V-50Hz a 110V-60Hz (americký standard) AC zdroj.

3.It is strictly prohibited to take it into the bathroom for use.

4.Nedovoľte deťom hrat se strojem.

Manualtil skotørretumbler

1. Before use, the power cable connector must be checked to avoid accidents such as electric shock and fire.

2. Please equip the device with the correct 220V-50Hz and 110V-60Hz (American standard) AC power supply.

3. It is strictly prohibited to bring it into the bathroom for use.

4. Do not let children play with the machine.

Schoenendrogerhandleiding

1.Before use, the plug of the power cord must be checked to prevent accidents such as  
to prevent electric shocks and fire.

2.Please equip with the correct 220V-50Hz and 110V-60Hz (American standard) AC power supply.

3. It is strictly prohibited to bring it into the bathroom for use.

4.Do not allow children to play with the machine.

Handbook for Advance Payment

1. Before use, the power cord's connection must be checked to avoid accidents such as electrical shocks.  
supports and brand.

2. Please use a 220V-50Hz and 110V-60Hz (American standard) power supply.

3. It is strictly prohibited to take that inibadrum for use.

4. Do not let children play with the machine.

δη γεστεγνωτραπατο΄ταιν

1.ρ τη ρ τ βσα αλωδ δσα ρεπε α ελεχθει γα α αφεχθ  
You have not done anything at all.

We are providing the correct power source for 220v-50hz and 110v-0hz.  
(ασαο ο.)

3.It's a pity that you can't return it when it's used.

4.Don't let your feet play with the dirt.

Car dryer guide

1.Before use, the power cable connector must be checked to avoid electrical shocks.  
to prevent lightning and fire.

2. Please prepare a correct 220V-50Hz and 110V-60Hz (American standard) AC power supply.

3. Use in the sauna is strictly prohibited.

4.Do not allow children to play with the machinery.

Instructions for the shoe dryer

1.Before use, the power cord's plug should be checked to avoid accidents such as  
electric shocks and fires.

2.Properly equip the power supply for AC 220V-50Hz, 110V-60Hz (US specifications).

3. It is strictly prohibited to take it into the bathroom.

4. Do not let the child play with the machine.

tm o b y py

1.epe coboam aebo oazt e aeboro an, obi b  
abapn, tax ak ðekpeckn wokn noap.

2.oayúca, cobyûe aboe nco a peeoro oa 22B-r4n  
110B-60r(amepnaHckn ctaapt).

3. The current situation is not good, and things are not going well.

4.I have no3Bone in rpab c mano.