


COMFAST

Outdoor AP Quick Instalation Guide



Outdoor AP
M0304993 Version 2.0

1. Please set automatically get ip for the computer, connect the ap lan port to the setting page.

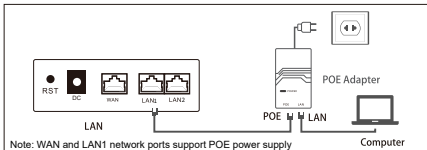

2. Set the computer to obtain the IP address automatically, and connect the LAN1 port of the device to the device management interface.


3. The device is defaulted to the interface Router mode. The steps to enter the setup page as follows:


(Note: Please connect the wireless network management page to the single network port device).

(1) Under default configuration, power on the device and wait for the device to start for 90 seconds.


(2) Connect device wireless SSID (default is COMFAST_XXXX_2G or COMFAST_XXXX_5G, XXXX is the last 4 digits of the MAC).

(3) Input 192.168.10.1 in the web browser to get into the setting page.

(4) Open the computer browser, and input 192.168.10.1 to get into the device login page (Default username: admin, Default password: admin). The device language is compatible with Chinese and English to choose, and you can set up the language by the top right corner icon  .

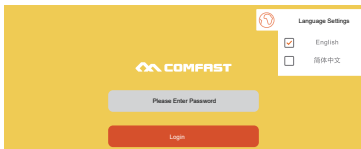

4. When getting into the setting page, there are four working modes in the Wizard: AP Mode, Bridge Mode, Router Mode, Repeater Mode.

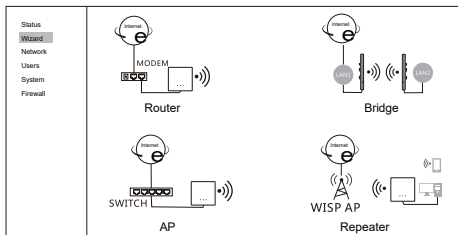

5. Click AP mode and set up IP Address and Subnet Mask. The IP address and Subnet mask should be within the same network segment as upper network and can't be conflict with IP address from upper network router. After settings, you can visit the device from the IP address you have set just now by connecting internet with WAN port of the device or PoE adapter LAN port.

- ① Notes: In AP mode, the IP address from the other devices connected the AP will be allocated by the upper network router.
- ② The AP needs to set an intranet IP address (do not set the same IP address as the upper router). If want to manage the device, Manually set the IP address of the same network segment of the intranet IP.

The screenshot shows the configuration page for the 'Lan Settings' step in the Wizard. The progress bar at the top indicates three steps: 'Lan Settings' (1), 'Wireless' (2), and 'Finish' (3). The 'Lan Settings' section contains two input fields:

IP Address	192.168.10.1
Subnet Mask	255.255.255.0

A 'Next' button is located at the bottom right of the configuration area.

6.AP Mode: You can setup 2.4G wireless SSID, password, channel and country in advance. After setting up, the device's WAN port or PoE adapter LAN port connected internet, other mobile devices can connect the SSID to surf the internet.

① ————— ② ————— ✓

Lan Settings Wireless Finish

2.4G Wireless

SSID:

Password:

Country:

Bandwidth:

Channel:

5.8G Wireless

SSID:

Password:

Country:

Bandwidth:

Channel:

Prev **Next**

7.Bridge Mode: Pls ensure the WDS in upper network is enabled. AP device can set up intranet segment (do not set the same IP address as the upper router), and then select the wireless SSID signal you need to bridge and input wireless password. (Notes:The password is same as your upper network router)

① ————— ② ————— ③ ————— ✓

Lan Settings Bridge settings Wireless Finish

Lan Settings

IP Address:

Subnet Mask:

Next

Scan Result Refresh

NO.	BSSID	SSID	Channel	oper
1	40:A5:EF:84:E6:34	COMFAST-1111-2.4G	1	
2	40:A5:EF:84:DE:64	COMFAST-ERA4-2.4G	2	
3	40:A5:EF:85:48:21	COMFAST-GAD4-2.4G	2	
4	00:E0:4C:81:96:D1	COMFAST-FAA5-2.4G	1	
5	40:A5:EF:84:E6:31	COMFAST-AD54-2.4G	2	
6	40:A5:EF:84:DE:61	COMFAST-2548-2.4G	1	
7	40:A5:EF:80:97:36	COMFAST-SD25-2.4G	1	

Scan Result Refresh

NO.	BSSID	SSID	Channel	oper
1	40:A5:EF:84:E6:34	COMFAST-1111-5.8G	1	
2	40:A5:EF:84:DE:64	COMFAST-ERA4-5.8G	2	
3	40:A5:EF:85:48:21	COMFAST-GAD4-5.8G	2	
4	00:E0:4C:81:96:D1	COMFAST-FAA5-5.8G	1	
5	40:A5:EF:84:E6:31	COMFAST-AD54-5.8G	2	
6	40:A5:EF:84:DE:61	COMFAST-2548-5.8G	1	
7	40:A5:EF:80:97:36	COMFAST-SD25-5.8G	1	

Pls set the SSID and password for the device and click "Next" of finish settings.

① Lan Settings
② Bridge settings
③ Wireless
Finish

2.4G Wireless

SSID

Password

5.8G Wireless

SSID

Password

Prev
Next

8.Repeater Mode:The AP device can set the internal network segment (the gateway IP should not be the same as the upper device gateway IP).Next,select the name of the wireless SSID signal that you need to relay and input wireless password.

(Notes: The password is same as your upper network router).

① ————— ② ————— ③ ————— ④

Lan Settings Repeater Settings Wireless Finish

Lan Settings

IP Address 192.168.10.1

Subnet Mask 255.255.255.0

Next

Scan Result Refresh

NO.	BSSID	SSID	Channel	oper
1	40:A5:EF:84:E6:34	COMFAST-1111-2.4G	1	
2	40:A5:EF:84:DE:64	COMFAST-ERA4-2.4G	2	
3	40:A5:EF:85:48:21	COMFAST-GAD4-2.4G	2	
4	00:E0:4C:81:96:D1	COMFAST-FAA5-2.4G	1	
5	40:A5:EF:84:E6:31	COMFAST-AD54-2.4G	2	
6	40:A5:EF:84:DE:61	COMFAST-2548-2.4G	1	
7	40:A5:EF:80:97:36	COMFAST-SD25-2.4G	1	

Scan Result Refresh

NO.	BSSID	SSID	Channel	oper
1	40:A5:EF:84:E6:34	COMFAST-1111-5.8G	1	
2	40:A5:EF:84:DE:64	COMFAST-ERA4-5.8G	2	
3	40:A5:EF:85:48:21	COMFAST-GAD4-5.8G	2	
4	00:E0:4C:81:96:D1	COMFAST-FAA5-5.8G	1	
5	40:A5:EF:84:E6:31	COMFAST-AD54-5.8G	2	
6	40:A5:EF:84:DE:61	COMFAST-2548-5.8G	1	
7	40:A5:EF:80:97:36	COMFAST-SD25-5.8G	1	

Pls set the SSID and password for the device and click "Next" finish settings.

① — ② — ③ — ✓

Lan Settings Repeater Settings Wireless Finish

2.4G Wireless

SSID COMFAST_2A15_2G

Password

5.8G Wireless

SSID COMFAST_2A15_5G

Password

Prev Next

9.Router Mode: There are three ways to surf the internet: PPPoE, Static, and DHCP (Pls refer to router setting as reference)

① — ② — ③ — ✓

WAN Settings Lan Settings Wireless Finish

WAN Settings

PPPoE Static DHCP

IP Address

Subnet Mask

Gateway

DNS

Next

Maintenance Regulations

Dear Valued Clients,

Thank you for purchasing a COMFAST products and service to protect your rights, please read the following maintenance regulations.

The following does not belong to free maintenance, our company can provide paid service, please note:

- Failure to require the installation manual , use , maintenance, storage lead to product failure or damage;
- Beyond the limited warranty, the warranty period; Unauthorized alteration, tearing up the product bar code;
- Without authorization to change the settings file or inherent disassemble without authorization;
- Unexpected factors or human actions lead to product damage, such as improper input voltage, temperature, water, mechanical damage, break, rust or serious oxidation of product, etc;
- Other non-product itself, design, technology, manufacturing, quality and other quality problems caused by the failure damage.

Customer Data

Name	
Address	
Model	
Mac Address	
Machine unit sales	
Sale of machine address	
Date	
Tel	
Post code	
Invoice no	

Copyright Information

Statement

Shenzhen Four Seas Global Link Network Technology CO.,Ltd.Company all rights reserved.

Without ours official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book.In any form or by any means(electronic, mechanical, printing,recording or other possible means)or for the propagation of goods any commercial, profitable purposes.

COMFAST is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company. All other trademarks or registered trademarks mentioned in this document,by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee.



Manufacturer: Shenzhen Four Seas Global Link Network Technology Co.,Ltd.

Address: 9th Floor, Building H, Huanan Digital Valley, No. 1 Huanan Road, Longhua District, Shenzhen, China

Hotline:0755 83790059 / 83790659

Website:www.szcomfast.com