

No.	Name	Function Description
1	Audio Socket / USB Port	<ul style="list-style-type: none"> <li>• For connecting to Waterproof Earphone</li> <li>• For connecting to USB cable to connect to USB port of computer for file transfer</li> <li>• For connecting to USB cable to connect to USB port for charging of MP3 Player</li> </ul>
2	Volume Increase / Forward Track	<ul style="list-style-type: none"> <li>• Press to select next track</li> <li>• Press and hold to increase volume</li> </ul>
3	Volume Decrease / Backward Track	<ul style="list-style-type: none"> <li>• Press to select previous track</li> <li>• Press and hold to decrease volume</li> </ul>
4	Play/Pause/Power Off	<ul style="list-style-type: none"> <li>• Press to toggle between Play and Pause</li> <li>• Press and hold to turn on or off the MP3 Player</li> </ul>

5	Reset Button	<ul style="list-style-type: none"> <li>• Press to restart the MP3 Player</li> </ul>
6	LED Indicator	<ul style="list-style-type: none"> <li>• Press and hold button 4 to turn on the MP3 Player. The LED Indicator light will be on. If there is MP3 File in the MP3 Player, it will automatically play the first song and the LED Indicator light will be blinking.</li> <li>• Press button 4 to pause the song when playing. The LED Indicator light will be on.</li> <li>• Press button 4 to play the song when in pause mode. The LED Indicator light will be blinking.</li> <li>• Press and hold button 4 to turn off the MP3 Player. The LED Indicator light will be blink and turn off.</li> <li>• The LED Indicator light will be blinking during charging. Charging takes about 2 hours.</li> <li>• The LED Indicator light will be on when connected by USB cable to the computer for file transfer</li> </ul>

## How to turn to FM mode

- During Pause status in MP3 Player mode, press either button 2 or button 3 to switch to FM mode.
- In FM Mode, press and hold either button 2 or button 3 to turn on Auto search mode. The device will search and save all the radio channels.
- Press button 2 or button 3 to select FM channel
- To exit FM mode and to go MP3 Player mode, press button 4 (pause button) and press either button 2 or button 3 to change mode.

## Operational Instructions

### 2.1 Transferring the music files to MP3 Player

- connect the MP3 Player to computer using the USB cable provided
- the device is plug and play and a "Removable Disk" icon and notification will be shown on your computer
- use the file manager to copy the music files to your MP3 Player
- double click the USB device icon on the tool bar to disable the MP3 Player before disconnecting the MP3 Player

### 2.2 Charging the MP3 Player

- charge the MP3 Player via the USB Cable with any USB ports such as computer USB charger or even power banks.

### 2.3 Using the MP3 Player when swimming

- attach the MP3 Player to your swimming goggles using the clip behind the MP3 Player and wear the earphone with the clip behind your ears.
- wipe the MP3 Player dry with a dry cloth immediately after swimming.



## Digital Waterproof Music Player User's Manual

### 1. ZProduct Introduction

#### 1.1 Package Content

Standard Swimmer Package Includes the following

- Digital Waterproof MP3 Player
- Waterproof Earphone
- USB Cable (for charging and date transfer)
- User Manual

#### 1.2 Systems Requirements


Prior to using the MP3, please confirm that the OS of your computer is of the following

- Windows 98SE/ Windows 2000/ Windows ME/ Windows XP/ Windows 8 or Mac OS 8.6

#### 1.3 Specifications

- Waterproof IPX8
- MP3/WMA File Support
- Battery Life (up to 8 hours of playtime)
- Firmware updating, file transmission and charging via USB Cable
- Operation temperature under water : 0C to 50C; Humidity 20% to 100%
- Dimensions : 68mm (length) x 34mm (width) x 26mm (height)
- Weight : 25g packaging97g

#### 1.4 Appearance and Function Keys

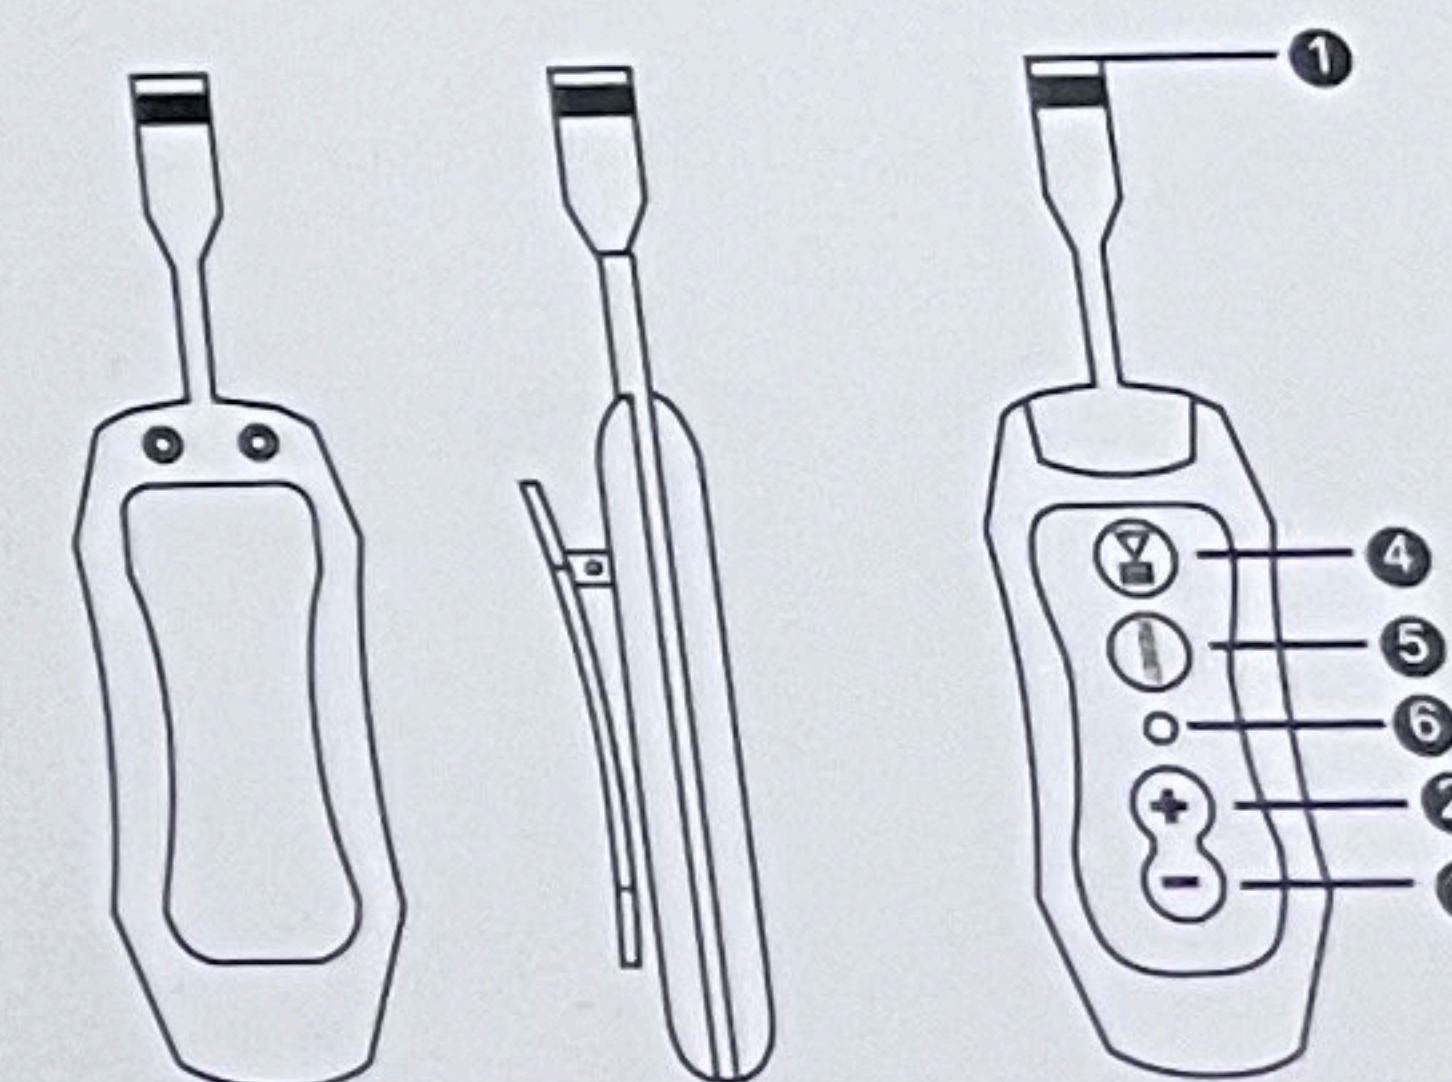

LEAGUE OF LEGENDS