

Hair Dryer User Manual

I.Safety Warnings

!Do not use in humid environments such as bathrooms.

!Before use, inspect the power cord for damage.

!Children must use this product under adult supervision.

II.Product Name

Hair Dryer

III.Brand

XX Brand

IV.Instructions for Use

1.Power Connection: Insert the plug into a power outlet.

2.Power On: Press the power switch to start operation.

3.Temperature Adjustment: Rotate the temperature control knob to select the desired heat level.

4.Hair Drying: Direct the air outlet toward your hair to dry it.

V. Precautions

1.Avoid prolonged continuous use.

2.Do not apply the high-heat setting directly onto the scalp.

3.After use, unplug the device and store it in a well-ventilated area.

VI.Feature Overview

1.Multiple Airflow Settings: Suitable for various hair types and styling needs.

2.Hot/Cold Air Switching: Protects hair from heat damage.

3.Lightweight Design: Ensures portability and ease of Handling.

VII.Frequently Asked Questions (FAQs)

1.Hair dryer does not operate: Check the power supply or plug connection.

2.Insufficient airflow: Clean dust from the air outlet.

VIII.After-Sales Service

1.Warranty Period: Free repair for non-man-made defects within 3 months.

Instructions for using the hair dryer

I. Advertencias

- 1.Do not use in humid environments, such as the bathroom.
- 2.Before using, check if the power cable has any issues.
some damage.
- 3.Children should use it under adult supervision.

II.Product name

Hair dryer

III.Product brand

Brand XX

IV.Instructions for use

- 1.Electrical connection: insert the plug into an electrical outlet.
- 2.Power on: Press the power on/off button to start your device.
operation.
- 3.Temperature adjustment: turn the temperature control knob
to select the desired temperature.
- 4.Hair drying: direct the air outlet nozzle towards the
hair to dry it.

V. Precautions

- 1.Do not use the device continuously for long periods of time.
of time.
- 2.Avoid high-temperature settings from coming into contact.
directly with the scalp.
- 3.After use, unplug the device and place it in a safe location.
Well ventilated.

VI.Function Description

- 1.Various air speeds: suitable for different types of
hair style.
- 2.Switch between hot and cold air: protects hair health and
prevents its deterioration.
- 3.Lightweight design: makes it easy to transport and handle.

VII.Frequently Asked Questions

- 1.The dryer is not working: check the connection to the electrical grid or the
plug status.
- 2.Insufficient air flow: clean the accumulated dust at the outlet
of air.

VIII.After-sales service

- 1.Warranty period: free repair for the first 3 years
months after the purchase, as long as the damage is not caused by misuse
use.