


梵冰 Famue

4.0-inch Music Player User Manual

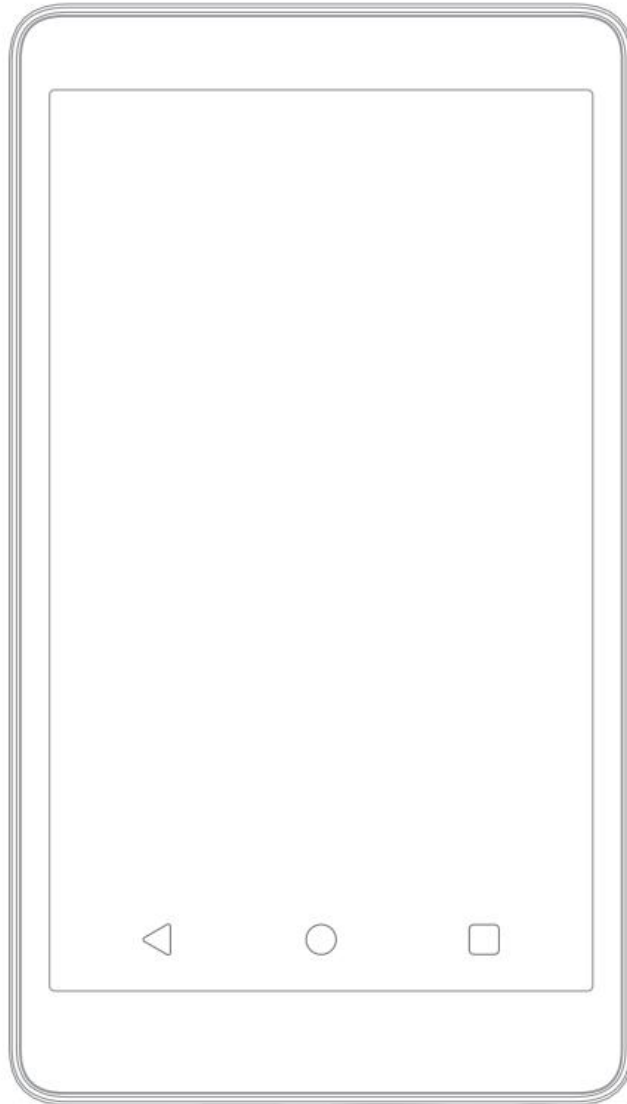

To ensure the best user experience, please read the user manual carefully
Please keep this manual properly for future reference

Preface

1. Thank you for purchasing the PF31WiFi music player. Before using this product, please read the user manual carefully. When you start using this product, the company assumes that you have already read and understood this user manual.

2. This user manual is compiled based on the latest information available at the time of product manufacture. If any changes are made to the product, we will not provide separate notifications.

3. The power interface of this product is designed for charging the built-in battery. Please use a computer USB port or a 5VDC/1A power adapter that meets national standards and has passed CCC certification to charge the device. Do not connect to other power sources, as this may result in failure to charge, data loss, or hardware damage, which could lead to irreversible consequences. The company shall not be held responsible for any such issues.

4. Users must not attempt to repair or disassemble the product themselves, otherwise we will be unable to provide normal after-sales service.

The company is not liable for any editing errors or omissions in this document. Due to continuous product improvements, the company reserves the right to modify product specifications without prior notice. No content of this user manual may be reproduced, translated, or distributed in any form or for any purpose without prior written permission from the company.

Precautions

1. Please keep the product away from electromagnetic environments, as well as harsh conditions like excessive humidity and smoke/dust.

2. Do not immerse this device in water, and do not use any corrosive or abrasive cleaning agents to clean the unit.

3. Do not apply excessive force to squeeze the product.

4. Do not subject the product to severe vibration or impact.

5. It is recommended to turn down the unit's volume before using headphones, then gradually increase it to a comfortable level after starting playback. To protect your hearing, do not turn the volume too high (doctors note: listening at loud volumes for extended periods can damage hearing). If tinnitus occurs, lower the volume or stop use.

6. Ensure the product is placed safely to prevent accidental contact or dropping by children.

7. Under normal circumstances, the unit takes about 3 hours to fully charge. After charging, unplug it from the USB port—do not leave it connected to power for long periods.

8. Do not use headphones while driving, riding a vehicle, operating machinery, or doing work that requires awareness of external sounds.

9. Battery Charging Precautions:

1) The unit uses a rechargeable polymer lithium battery.

2) The polymer lithium battery must be replaced by a professional (Note: Improper replacement poses an explosion risk; only use the same or equivalent battery type). To protect the environment, hand over used batteries to professional recycling agencies.

3) Battery life may vary based on usage conditions and production date.


4) Do not expose the battery to overheating conditions (e.g., direct sunlight, open flame).

10. Software updates may cause discrepancies between actual product use and this manual. The purchased product shall prevail—this manual is for reference only

Main Features

- 4.0-inch full-view-angle IPS display screen
- Full-screen capacitive touch control
- Supports multiple audio formats, with synchronized lyric display and various sound effects
- Supports video playback, with 1080P high-definition decoding
- Equipped with Bluetooth 4.0 module: low power consumption, high stability, long transmission range (supports dual-directional Bluetooth connection)
- Built-in clock and alarm functions
- Supports multiple image formats, including slideshow playback
- Supports TF card, expandable up to 1TB
- Supports multiple languages
- Supports external playback

Button Description

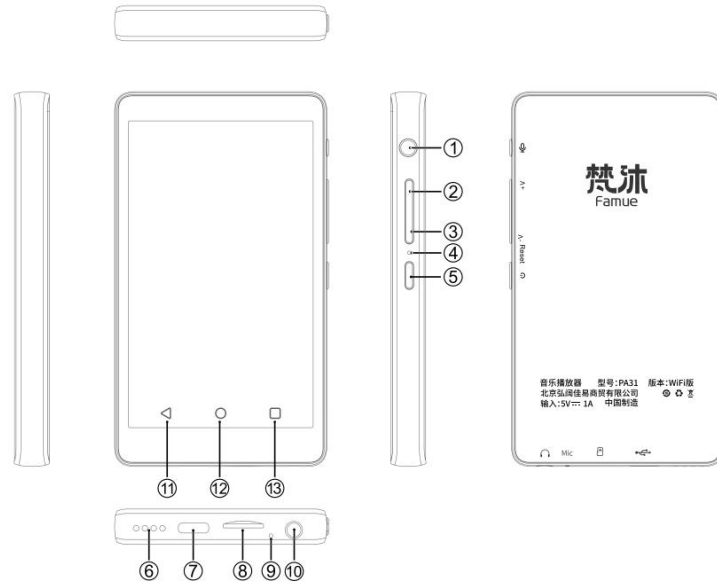

1. Recording Button
2. Volume Up
3. Volume Down
4. Reset Button
5. Power Button/Screen On/Off
6. Speaker
7. USB Port
8. TF Card Slot
9. Recording Hole
10. Headphone Jack
11. Return Button
12. Home Button/Main Menu
13. Background Programs

Operation Instructions

Power On: In the powered-off state, press and hold the power button, and the system will enter the boot screen.

Power Off: In the powered-on state, press and hold the power button to start shutting down the device.

Main Interface Introduction
 a. Status Bar: When entering a specific function menu, the top bar of the interface is the status bar, which displays information including time, battery, power level, and Bluetooth status icons.
 b. Function Icons: Tap the icons directly on the main interface to access various functions or configure relevant settings for the device.

System Reset: If the player freezes, insert a stylus into the "RESET" button to reset the device (the system will force a restart). If the device still fails to power on, check if it is out of battery.

Return: Tap the "←" icon in the top-left corner to return to the previous menu.

Volume Adjustment

Buttons: In the playback interface, briefly press the side "Volume Up" button to increase the volume (the volume value will show the increase); briefly press the side "Volume Down" button to decrease the volume (the volume value will show the decrease).

Touch: A volume bar will pop up on the desktop; drag the slider to adjust the volume level.

Accessory List

Main Unit: 1 unit

Type-C Data Cable: 1 cable

User Manual/Warranty Card: 1 copy


Product Certificate of Conformity: 1 sheet

*The product accessories are subject to the actual items included in the package.

Function Description

Gallery


On the main interface, tap the "Images" icon to enter. Tap the target file to open it; once the image is displayed, a back button and toolbar will appear at the top. The toolbar includes functions: Delete, Play Slideshow, Edit, Rotate Left/Right, Crop, Set as


Background, Details, and Print. The " " icon in the bottom-left corner allows image editing. Swipe left/right to turn pages.

FM Radio

On the main interface, tap the "Radio" icon to enter. Use the "<" and ">" buttons to manually fine-tune the radio frequency to select a station. Use "◀" and "▶" to quickly switch between saved stations (the "★" marks saved frequencies). The "☰" icon in the top-right

corner triggers auto-search for radio frequencies. The " " icon lets you switch between

headphone and speaker output; the " " icon enables recording of the radio audio. Tap

" " to play the radio, or "□" to pause.

Voice Recorder

On the main interface, tap the "Recorder" icon to enter:

Start Recording: Tap "●" to begin recording.

Pause/Resume Recording: Tap "||" to pause, then tap "●" again to resume.

Save Recording: Tap "■" to save the recording.

Recording File List: Tap "☰" to view recorded files. **[Note]** Recording formats are WAV and MP3.

Calendar

On the main interface, tap the "Calendar" icon to enter. Use the "▼" icon in the top-left corner to switch between daily, weekly, monthly, and schedule views. Select a specific day to add notes or other information. The "⋮" menu bar includes functions: Create New Event, Refresh, Search, Display Calendar, Clear All Events, Jump To, and Settings.

File Management

On the main interface, tap the "Files" icon to enter—here you can view files stored on the device or in the TF card. Tap a target file to open it; if you tap media content (like music, videos, or images) within the file, you'll be directed to the corresponding functional interface (e.g., Music, Video, or Gallery).

This feature also supports creating new folders and searching for files. Long-press a file to access functions including Copy, Cut, Share, Delete, Rename, and View Details.

Bluetooth

On the main interface, tap the "Bluetooth" icon to enter. Tap the switch in the top-right corner to turn on Bluetooth, then tap "Search for New Devices" to connect to available devices (it will also automatically reconnect to previously paired devices)—the Bluetooth icon at the top will change to "⌘" when connected.

From the "Available Devices" list shown after searching, tap the desired device to establish a connection.

Settings

On the main interface, select "Settings" to enter. The following configurations are available:

WLAN: Connect to WiFi networks.

Bluetooth: Pair with other Bluetooth devices (e.g., phones, Bluetooth headsets, speakers).

Memory: View the internal storage status of the device.

Apps & Notifications: View recently opened applications and manage notification permissions.

Battery: Check battery level and configure smart power-saving settings.

Display: Adjust screen brightness, night mode, wallpaper, sleep time, screen rotation, font size, font style, and screen saver.

Sound: Adjust media volume, alarm volume, and notification volume separately.

Storage: View and manage internal device storage and TF card storage.

Security: Set a device lock screen password and encrypt data for protection.

Auto Shutdown: Choose auto-shutdown timing (options: 5 minutes, 10 minutes, 15 minutes, 20 minutes, or never).

Scheduled Power On/Off: Set automatic power-on/off times.

System:

- a. Language and input method;
- b. Date and time;
- c. Factory reset;
- d. About device.

Charging Operation & Battery Management

The device supports USB charging: Connect one end of the USB cable to a computer's USB port, then connect the other end to the device's charging port to start charging.

Charging is complete when the battery icon stops flashing.

【Notes】

New batteries require several charge-discharge cycles to reach optimal performance.

If the device is not used for an extended period, charge it at least once a month to prevent

battery damage from excessive depletion.

Battery damage caused by over-depletion of the polymer battery is not covered by the warranty. Issues arising from using non-device-specific chargers are also excluded from warranty coverage.

Using TF Card

The device has a TF card expansion slot, which can store videos, images, e-books, etc.

To insert: Insert the card correctly into the slot, push it inward until you hear a "click".

To remove: Push the card inward slightly, then release—the card will pop out automatically, and you can then take it out.

【Notes】

Insert the card correctly into the device's card slot.

Do not remove the memory card while it is in use (e.g., reading, transferring data), as this may cause data errors.

Avoid using or storing the memory card in high-temperature, high-humidity environments.

Keep the memory card away from liquids and corrosive materials.

Product Specifications

- Product Name: Music Player
- Dimensions: 106.3*60.2*9.9mm
- Display Screen: 4.0-inch, 480*800 pixels
- Product Weight: Approx. 130g
- Battery: 1500mAh
- Charging Specification: 5V/1A input
- Charging Time: Approx. 3 hours
- Bluetooth Module: Bluetooth 4.0
- Music Playback Time: Approx. 12 hours
- Standby Time: Approx. 5 days
- Signal-to-Noise Ratio: ≥85dB
- TF Card Expansion: ≤1TB
- Audio Formats: MP3, OGG, FLAC, AAC, WAV, WMA, APE
- Video Formats: RM, AVI, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, TS
- Recording Formats: WAV, MP3, etc.
- Image Formats: JPG, BMP, GIF, PNG
- Interface: Type-C USB2.0
- Audio Bitrate:
 - MP3: 32Kbps-320Kbps
 - WAV: -1411Kbps
 - AMR: -12.8Kbps
 - APE: 258Kbps-1411Kbps
 - FLAC: 265Kbps-1411Kbps
- Compatible Systems: Supports Windows 7 and later systems
- Software Languages: Simplified Chinese, Traditional Chinese, English (multi-language)
- Operating Temperature: 0-45°C

*The audio indicators in this table are for reference only. Due to minor differences in the product's electronic components, there may be slight deviations in audio parameters. Please refer to the actual product.