

Vacuum Cleaner Accessories

Instruction Manual & Safety Information

1. Product Description

This product includes compatible vacuum cleaner accessories such as filters, side brushes, mop pads, roller brushes or dust bags. These accessories are designed for household vacuum cleaners and robot vacuum cleaners for dry indoor cleaning only.

2. Intended Use and Use Restrictions

- Use the accessories only with compatible vacuum cleaner models specified by the seller.
- For household use only. Not intended for commercial or industrial use.
- Do not use on wet surfaces unless the accessory is explicitly designed for wet cleaning.
- Do not modify the product or use damaged accessories.

3. Installation and Use Instructions

- Switch off and unplug the vacuum cleaner before installing or replacing accessories.
- Remove the used accessory according to the vacuum cleaner manufacturer's instructions.
- Install the new accessory firmly in place until it is securely fitted.
- After installation, check that the accessory rotates or fits correctly before operation.

4. Cleaning and Maintenance

- Clean reusable accessories regularly according to usage frequency.
- Allow washed accessories to dry completely before reuse.
- Replace disposable accessories such as filters or dust bags at recommended intervals.

5. Safety Information

■ WARNING / SAFETY INFORMATION

- Keep accessories out of reach of children.
- This product is not a toy.
- Do not swallow small parts. Choking hazard.
- Do not use damaged or deformed accessories.
- Use only in dry indoor environments unless otherwise specified.



6. Disposal Information

Dispose of used accessories in accordance with local waste regulations. Do not dispose of electrical or electronic components with household waste.

7. Manufacturer / Importer Information

The manufacturer or EU importer information shall be provided by the seller on the product listing, packaging or accompanying documentation.