

封面

INSTRUCTIONS

Waterproof hair clipper CDH020B

Host

Warning

- ★ Plug the AC adaptor into a household outlet where there is no moisture present. Handle it with dry hands.
- ★ Please use the original power adapter cable to charge the hair clippers, this power adapter cable is specially designed and can not be used for other models.
- ★ If the power adapter cord is damaged in any way, discontinue use immediately. Operating the appliance with a damaged cord can result in electrical shock, short circuit and/or fire.
- ★ Take care when removing the power adaptor from the outlet.
- ★ Please pay attention to cleaning after each haircut, cleaning between each use will avoid the accumulation of hair which will affect the operation of the cutter head.
- ★ Please use the original power adapter cable to charge the hair clippers, this power adapter cable is specially designed and can not be used for other models.
- ★ Do not allow children to use unsupervised and do not leave within the reach of infants. This may lead to injury.
- ★ Clean the clippers using only warmwater, do not use salt water or hot water.
- ★ In order to avoid damage and injury, please do not disassemble this product or attempt to repair it yourself. Please visit a professional service center for repair.

How to Trim Body Hair Properly

1. Trim against the hair growth direction.
2. DO NOT trim in this way.
3. Tighten and flat the loose skin by fingers. Gently and slowly move the trimmer.

Comb

3-6mm guide comb 9-12mm guide comb

Positioning comb

When trimming the hair, the combs can be positioned according to the desired length.

Specifications

Name: Hair trimmer Model: CDH020B


Charging time: 1h Use time: about 65 minutes

Rated voltage: 5V $\overline{=}$ Rated current: 1A

Executive standard: EN 60335-1:2012+A11:2014
EN 55014-1:2006+A1:2009+A2:2011
EN 55014-2:2015 EN 61000-3-2:2014
EN 61000-3-2:2013

Battery specification: 3.7V 600mAh Li-ion batteries

Accessories

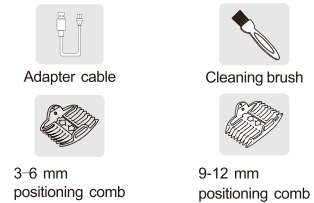

Charging indicator

- ① When the hair clipper is charging, the indicator light will be on. It will take approximately three hours to accrue a full charge.
- ② When the battery is full, the light will turn off.

Warning

Please use the provided power adapter cable to charge. Only use the clippers after the batteries are fully charged. It is not possible to use the clippers while charging.

Installation and disassembly guide comb

Can be fixed to trim 3-6 mm length hairstyle. Can be fixed to trim 9-12mm length hairstyle.

Tip: Use the positioning comb to avoid cutting errors. This comb can control the overall length of the hairstyle. Its misuse will result in a cut that is too short.

Installation: 1. Align the end of the guide comb with the groove on the side of the clipper. 2. Push the comb into place until you hear a "click" sound.

Disassembly: As shown in the figure, you can easily remove the positioning comb by simply pulling up on one side.

Note: The desired length should be facing up.

Tip: Be sure to lubricate the cutter head before use and after each use. Regular maintenance can extend the service life of the cutter head.

Installing and removing the cutter head

Disassembly head

To disassemble the head: Turn the switch to the off position. Position the hair clipper face up and use your thumb to press the tooth part of the cutter head. Press down firmly in the direction of the arrow shown.

Mounting head

To affix a head: Align the selected head joint onto point A ensure the head fits into the fuselage card (slot B).

After aligning, press the head down on the back towards the blade.

Warning

The battery run time is based on frequency of use and maintenance. Change the blade periodically to avoid uneven cutting. The blade will heat slightly during operation which is normal.

Maintenance-1

Warning

Run water down the opening of the plate to rinse off any hair trimmings.

Do not use gasoline, paint thinner or other corrosive chemicals to wipe the body of the clippers! This can cause the product casing to discolor. It is recommended to use a weak alkaline soap and water or water alone to clean the body.

After rinsing, wipe with a soft cloth and let dry. Note: To avoid the risk of shock, be sure to keep the charging interface dry while charging.

After replacing the cutter head back on the fuselage, store in a safe place. Extend the life of your product by fully charging the device every time you use it.

Warning: The handheld portion of the clippers can be cleaned in the water after being disconnected from the power cord. Note: Ensure loose parts are properly installed to prevent them from falling into the water. Store and use at room temperature (10°C-35°C).

Maintenance-2

Lubricating oil for maintenance

Place a drop of lubricating oil in each of the 5 locations shown when you remove the blade.

Warning

Take care when handling the ceramic cutter head to avoid accidents and breakage. If the ceramic blade becomes damaged, it may cause the hair or the blade to rotate while cutting. Discontinue use and replace as soon as possible. Lubricating oil is not allowed to be sold with the device in certain countries.

Figure A: Clean the inside of the appliance with the brush.

Figure B: Brush any hair trimmings from between the stationary blade and the moving blade while pressing down on the cleaning lever to raise the moving blade.

Warning

After each use remove the blade and clean the surface of the blades. Properly cleaning the gap between the blades after each use will help avoid clogging the blade. If you rinse with water, be sure to try the blade thoroughly to avoid rust.

Common problems and treatment methods

- 1. Why doesn't the blade work?**
* Take off the blade to check and see if hair has clogged the spinning axis. Clean all parts and try again.
* Take off the when switched on, is working when switched on, is the battery dead? Plug in the appliance if it doesn't work and try again after charging. Otherwise, please contact the distributor.
- 2. What can I do if the blade is not properly cutting hair?**
* Switch on the hair clipper and pinch the blade with a hand lightly.
* If the blade can be stopped easily, even when plugged in, please take the blade off, clean, and try again. Otherwise, please contact the distributor.
* If blade can not be stopped, and works well, the blade may be dull. Lubricate the blade in the 5 places indicated in the instructions. Manually slide the blade by hand several times and try again. If the blade is still not properly cutting hair, please change the blade.
- 3. Why doesn't the charging light work?**
* If the light doesn't illuminate, but the hair clippers worked well, that could mean there is no power to the outlet. If both the indicator light and hair clipper do not work, please contact the distributor.
- 4. The hair clipper will not accept a charge.**
* The hair clipper works well when plugged in, but doesn't work after removed from the outlet after charging for over 3 hours. In this case, the battery has aged and the device will need to be replaced.
- 5. For a faulty switch please contact the distributor for repair.**

80 g双铜, 单色印刷, 风琴折