 


AI ROBOT

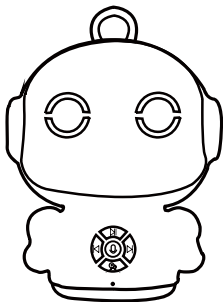

User Manual v2.2

I: Product Specifications

Product name	AI Robot
Product Model	CS-SSN-ZCAM
Size & Weight	19cmX14cmX10cm , NW 251g
Product material	PC+ABS
Interface Type	Micro-USB
USB charging input	5V1A (charging current limit 500mA)
Battery voltage	3.7V Battery capacity 2000mAh
Operating current	60mA max.
Languages	61 languages supported
Wi-Fi	Only connects to 2.4G networks, not 5G

II: Functional Definitions

Definition of chat modes: (Long press to Chat mode, Press to Talk mode, Wake up to Chat mode, Free to Chat mode)

The wake up words for Wake up to Chat mode and Free to Chat mode is: **Hey Tuya**

1 Long Press to Chat mode: This mode can only long press the Chat Activation Button for chat, long press this button for your speaking and release to end the speaking, then the robot begin to answer the content, you can also short press the machine to interrupt the machine to speak or long press to continue to say the next sentence; this mode of chat for: long press the Chat Activation Button to start talking → release the button→ robot receives the content and start to answer → **wait for the robot to finish the answer and then long press the button** to speak again or short press the button to interrupt.

2 Press to Talk mode: This mode is a short press Chat Activation Button to start talking, can also be interrupted by a short press when the machine long speaking or a short press to say the next line of content, this mode of chat works as follows: short press the Chat Activation Button to start talking → the robot receives the content and start to answer → waiting for the robot to answer to the end and short press again to continue to talk, can also be interrupted in the middle **of the robot speaking and short press the button to speak again; in this mode**, if no voice is received for 30 seconds, it will exit the chat mode and need trigger again;

3 Wake Up to Chat mode: This mode can be used to the wake up word or short press the Chat Activation Button to trigger the conversation, Only one party can speak each time after waking up, and if you want to continue the conversation, you need to wake it up again. this chat mode work as follows: Say the wake up words(hey Tuya) or short press the Chat Activation Button to start talking → the robot receives the wake up words and begin to answer. → say the wake up words (hey Tuya) or short press the Chat Activation Button to interrupt the conversation → say the wake up words for new chat. This mode if no voice is received for 30 seconds will exit the dialog mode and need to be triggered again.

4 Free to Chat Mode: In this mode, you can use the wake up words or short press the Chat Activation Button to trigger the conversation, Only say wake up words once(hey Tuya) you can free chat with AI Robot. This mode is as follows: Say the wake up words(hey Tuya) to wake up or short press the Chat Activation Button to start talking → the robot receives and starts to answer → wait for the robot to answer and then you can say any contents → the robot receives the content and starts to answer the next content; in this mode, if no voice is received for 30 seconds, it will exit the dialog mode and need to be re-triggered.

Note: Free to chat mode is the most intelligent and simplest of the four chat mode. You just say the wake up words(hey Tuya) once, then you can chat with AI Robot freely!


III: Key Definitions (as shown)

1 Chat Activation Button: In long press to chat mode, long press and hold the Chat Activation Button to speak when you need to have a conversation, and release the button to end the conversation;

In Press to Talk, Wake up to Chat Mode, and Free to Chat mode, you can directly talk to the AI Robot after short pressing the Chat Activation Button;

2 Volume +, Volume - buttons: Operation Mode: double-click; each double-click increases or decreases the volume by 20%;

3 Chat mode switch button: Operation mode: double click; Each double click cycles through the four chat modes (Long Press to Chat, Press to Talk, Wake Up to Chat, Free to Chat) in order.

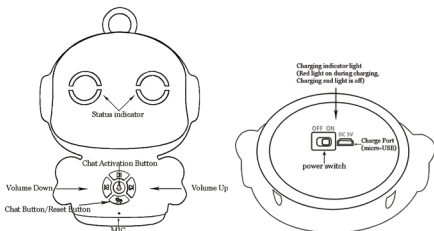

IV: Indicator mode description

Indicator light blinks steadily: the device waits for the paired with network.

Indicator light always on: standby mode

Indicator light blinks rapidly: microphone is receiving voice input

Indicator light off: robot is speaking, outputting content

V: Getting Started

1: Installation of the application

Scan QR Code (Smart Life) and download "Smart Life" App







or go to Apple App Store /Google play and search for "Smart Life" to download and install. Register your account.

2: Power on/off switch

Turn the device power switch to ON

Wait for the device to announce a voice to indicate that the device is powered on

3: Add Device

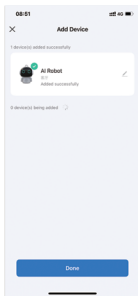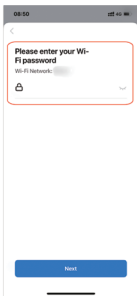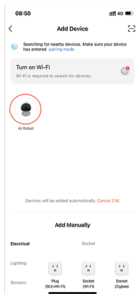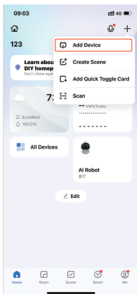

Note:The device only supports 2.4G wifi, the device must use the same wifi with your cell-phone which install App.

1) The status indicator is flashing steadily when the device is no network paring;

2) If the device is powered on without being connected to network, in addition to the blinking indicator light, there will also be a voice prompt indicating that the device is no network paring.

3) There will be a prompt voice when the connection is successful, then you can wake up the device to start talking to the device.

①Start talking

After powering on the device and hearing the voice "I'm connected, let's start talking", you can start talking to the device.

②Charge

Connect the charging cable to the charging port of this product to charge the device ;

The red light stays on when charging is not complete, and goes off when fully charged)



In order to ensure the safety of use, please use a regular charger with a rating of 5V1A or above (to be adapted by yourself) to charge this product.

For safety, children should not use the device while it is charging; The device cannot be powered on if the battery is critically low. It can be turned on once sufficient charge is available.

It takes about 5 hours to fully charge the device, this product is slow charging.

③Reset device into the pairing network state

Reset method 1 is shown in the figure:

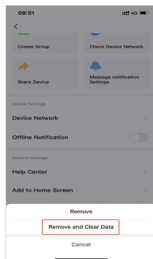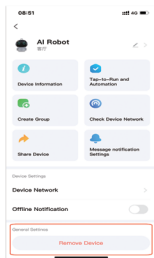

- 1 Tap "...” in the upper right corner of the APP device interface.
- 2 Click "Remove Device" at the bottom of the page.
- 3 Click "Remove and clear data", and then tap Confirm.

Reset method 2:

Long press the “Chat Mode Switch Button” for 10 seconds and the AI Robot will be reset.



VI: Function Description

Emotional accompanying chat

Choose the chat mode you need according to your preference, press the wake-up button or wake-up word to trigger the conversation, chat with the device, and the device gives a feedback reply to complete the conversation.

Co-Creating Stories

Children can create their own stories with the robot. Children can play freely, give the robot a character and a scenario to set, and let the robot tell the child a story.

Dialog games

Children can play interactive language games with the robot, such as idioms solitaire, riddles, encyclopedia quiz, etc. Other fun interactions, please feel free to explore.

Learning Guidance

You can take AI Robot for your teacher, you can ask any questions about Math, Literature, Science, History, Geography, etc.

Smart Home Control Hub

You can voice control your smart home devices by AI Robot. For example: “hey Tuya, turn on the bedroom light.”

Weather Enquiry

If no location is specified, the weather for your 'Home Location' (set in the APP) will be provided by default. You can also request weather for specific locations.


Time-telling Feature

If no location is specified, the time and date for your 'Home Location' (set in the APP) will be provided by default. You can also request the time and date for specific locations.

Chat security restrictions


The device has content restrictions in place. All output is suitable for ages 12 and below, and will not include adult content.


APP home location setting (as shown)

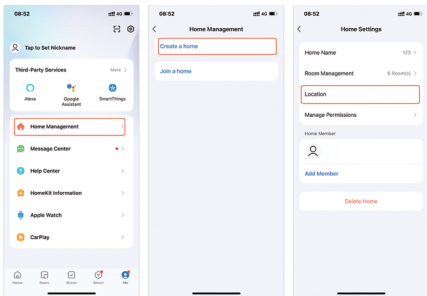

- 1 Tap 'me' in the lower right corner of the APP interface
- 2 Clicks Home Management
- 3 Click on Create a Home Or Your Home(If you have already set it up)
- 4 Tap Location to add your location

Create Custom Character

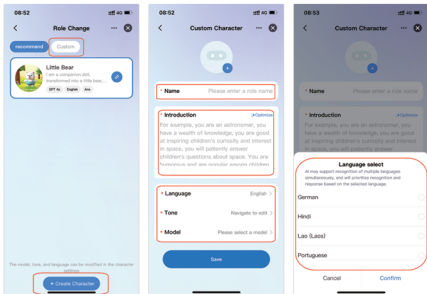

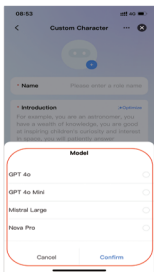

Our products are shipped with preset character.

If you feel that the character we created is not suitable, you can also customize the role you want to create, take a name you want, the character introduction can refer to the gray background text, or create your own, and then choose the language you want as well as the model.

The Role memory allows you to write things that you need your character to remember, such as the name you gave your character, your hobbies, birthdays, etc. The contents of the memory will be always kept if you don't unbind reset the factory settings or clear the context, and it will be increased according to the content of the ensuing chat;

Volume adjustment and query

Volume adjustment mode 1: Click on the volume icon in the lower right corner of the device interface to adjust the volume.

Volume adjustment method 2: Adjust the volume by double-clicking the volume + or volume - button on the device

Volume Adjustment Method 3: Wake up the device through function keys or wake-up words, and also adjust the volume through voice control (e.g., set the volume to 50%); please note that if there are multiple volume-adjustable devices in the current App family, you need to specify the device name (e.g., set<device name> the volume of to 50%), if no device name is specified, all devices with volume adjustment function will be adjusted.

Power/Battery Level Inquiry Methods

Method 1: You can check the current battery level directly through the battery icon on the App.

Method 2: Wake up the device using the function key or wake up words, and ask through voice (e.g., "What is the current battery level?"). The device will respond with the current battery level value.

VII: Note

This product is built-in lithium-ion polymer battery, do not put it near the fire source.

Do not charge continuously for more than 6 hours, make sure someone is present when charging, and do not charge when you are out or away for a long time.

Please be sure to check this product regularly, if you find abnormalities in the charging or charging cable, please stop using it immediately, otherwise there is a risk of electric leakage, short circuit or fire.

Do not use, store or charge in direct sunlight, near heat sources or in high temperature environments, and keep the product in a cool and dry place.

Before use, please inspect the product for any physical damage and ensure it functions normally...

Do not crash, impact, crush or puncture; do not disassemble, repair or modify;

Do not use this product or accessory when it is damaged or broken.

Do not clean the product while it is turned on or while it is being charged.

VIII: Packing List

AI robot x 1

User manual x 1

Micro-USB cable x 1



**Please scan the QR code
for more product usage videos and documents**

**Thank you for trusting AI robot.
Your support inspires our progress.
We wish you all the best!**