


ROJNY

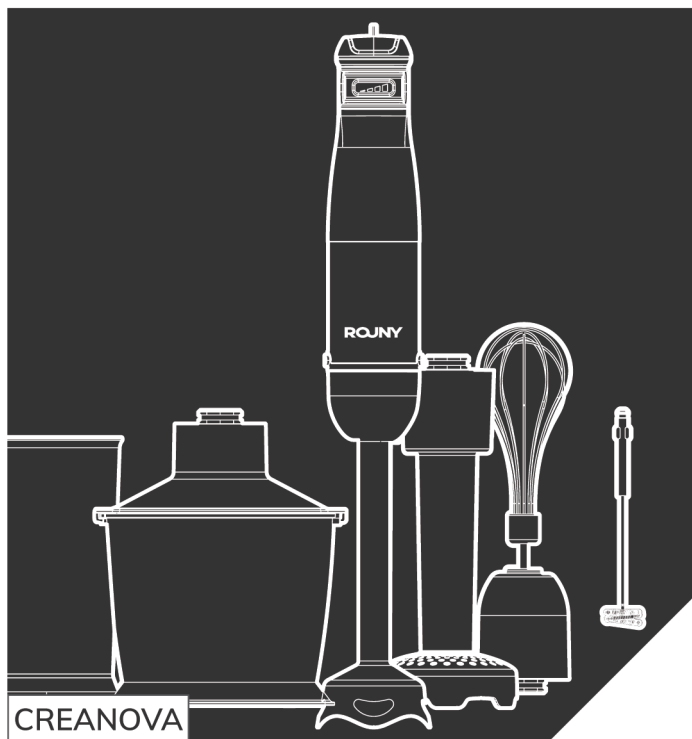

6-IN-1 HAND BLENDER

SAFETY & OPERATING GUIDE



The final interpretation right of the manual belongs to the ROJNY brand

Precautions


Before using this product, please read the instructions carefully and use the machine for its intended purpose as outlined in this manual. Do not use it for other purposes to avoid personal injury or damage to the machine.

1. Do not immerse the blender in water and ensure that the power cord is kept away from water sources.
2. When not in use, unplug the device, disassemble components, or clean, ensuring that the appliance is in the off state.
3. If you discover any damage to the power cord, have it replaced by the manufacturer or a qualified professional to prevent safety risks.
4. Avoid using the blender outdoors to ensure a safe operating environment.
5. Avoid letting the power cord hang over the edge of a table and be cautious not to touch hot surfaces, such as a stove.
6. Exercise caution with the sharp edges of the blades during use to prevent accidents.
7. Before inserting the plug into the socket, confirm that the voltage matches the appliance's rated label.
8. Prior to replacing accessories or coming into contact with moving parts, turn off the appliance and disconnect the power.
9. The appliance is not suitable for use by children; keep it out of their reach.
10. Prevent the motor, power cord, or plug from getting wet to ensure proper functioning.
11. Do not place the appliance in hot food to avoid damage or safety issues.
12. This appliance is carefully designed for handling regular household quantities, ensuring convenient usage.
13. Operation of the blending rod should not exceed 1 minute, and handling of hard foods should not surpass 15 seconds to ensure efficiency and safety.
14. When using this product, avoid misuse to prevent potential risks of injury.
15. Prior to unattended periods or before assembling, disassembling, or cleaning, always disconnect the appliance from the power source to ensure safe usage.
16. Users should be warned of potential risks of injury due to misuse, raising awareness.
17. Exercise caution when handling sharp cutting blades, emptying the bowl, and during the cleaning process to prevent accidental injuries.
18. Do not immerse or allow water to enter the detachable parts' connection areas to avoid affecting the product's functionality.
19. Before replacing accessories or coming into contact with moving parts, turn off the appliance and disconnect it from the power source to ensure safe operation.
20. Individuals with physical disabilities, sensory or mental impairments, or lack of experience and knowledge can use this appliance under supervision, guidance, and in a safe manner.
21. Do not allow children to play with this appliance to ensure their safety.
22. When pouring hot liquids into the appliance, be cautious, as it may spray out due to sudden evaporation. Use with care.
23. This appliance is suitable for household and indoor use, providing a safe and convenient home assistant.

Product Parameters


Motor Type	Copper Motor
Measuring Cup Capacity	600ml
Chopping Bowl Capacity	800ml
Product Size	60x68x410mm / 2.4x2.7x16.1 inch
Product Net Weight	0.9kg / 2 lbs

Product Parts Diagram

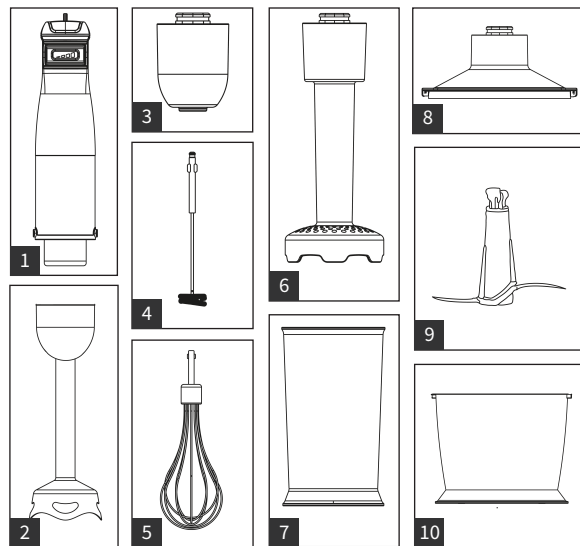

No.	Part Name	No.	Part Name
1	Main Unit	6	Potato Masher
2	Mixing Wand	7	Measuring Cup
3	Mixing Head Adapter	8	Bowl Lid
4	Milk Frother	9	"S" Blade
5	Egg Beater	10	Chopping Bowl

Operation Instructions

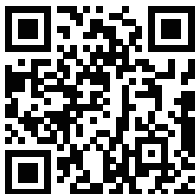

Scan the QR Code
watch the installation and usage video




Cleaning and Maintenance

1. Only use a damp cloth to clean the motor unit.
2. Do not immerse the motor unit in water!
3. All other components can be cleaned in the dishwasher. However, after processing salty foods, lift the blade immediately.
4. Be cautious not to use excessive detergents or descaling agents in the dishwasher.
5. When processing colored foods, the plastic parts of the equipment may discolor. Wipe these parts with vegetable oil before placing them in the dishwasher.

CAUTION

- When cleaning the blending rod, be sure to turn off the power and handle the blade section with caution. Ensure that your hands do not come into contact with the sharp edge of the blade.

Operation Steps

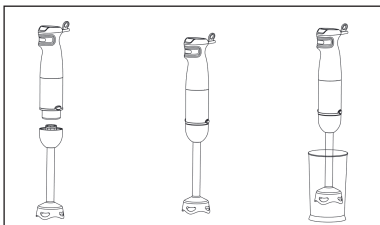


1. Install the blending rod onto the motor unit until it locks into place.
2. Place the hand blender into the container. Operate by pressing the switch.
3. Do not exceed 1 minute of continuous usage for the handheld blender.

CAUTION

- When using the blending rod, ensure that the blades are properly installed and securely fixed. Avoid bringing hands or other objects close to the blades during blending to prevent accidental cuts or injuries.

How to Use the Chopping Bowl

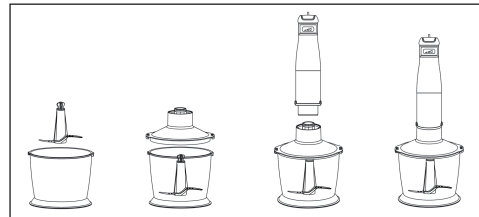

1. Carefully remove the plastic cover from the blade the first time you use it. Note: The blade is extremely sharp! Always grip the upper plastic part.
2. Place the blade on the central pin of the chopping bowl. Press down on the blade and lock it onto the bowl. Be sure to place the chopping bowl on a non-slip base.
3. Place the food into the chopping bowl.
4. Put the lid on the chopping bowl.
5. Rotate the motor unit on the chopping bowl lid until it locks into place.
6. Press the switch to operate the machine. During processing, hold the motor with one hand and the chopping bowl with the other.
7. After use, remove the motor unit from the chopping bowl lid.
8. Then, remove the chopping bowl lid. Carefully take out the blade.
9. Retrieve the processed food from the chopping bowl.

CAUTION

- Do not exceed 10 seconds when processing hard foods.
- The chopping bowl is excellent for chopping hard foods such as meat, cheese, onions, herbs, garlic, carrots, walnuts, almonds, plums, etc.
- Avoid chopping extremely hard foods like ice cubes, nutmeg, coffee beans, and grains.

Food	Meat	Herbs	Nuts, Almonds	Cheese	Bread	Onion	Cookies	Soft Fruit
Maximum	200g	50g	100g	100g	80g	150g	150g	200g

ROUNY

Around You

 service@rouny.tech

 www.rouny.tech
